



Ultra Flow Filter Housing
ASME Code
Universal

#### **CONTENTS**

- A. Shut Down and Cover Removal
- B. Media Replacement Components
- C. Cover Replacement and Start-Up
- D. Warranty
- E. Spare Parts List

# **UFH SERIES**

# **Installation and Operation Manual**

#### WARNING:

Please read installation, operation manual, and media installation/replacement instructions prior to operating your UFH Fil-Trek vessel.

Improper use of this model can result in personal injury and property damage.

#### **FIL-TREK CORPORATION**

#### ONTARIO

70 Fleming Drive Cambridge, ON N1T 2B1 PH: (519) 623-7448 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2

**ALBERTA** 

PH: (519) 623-7448 PH: (403) 346-6476 FX: (519) 623-8807 FX: (403) 346-5152

Ultra Flow Filter Housing **ASME Code** Universal

#### **FIL-TREK CORPORATION**

# **ONTARIO**


70 Fleming Drive Cambridge, ON N1T 2B1 PH: (519) 623-7448 FX: (519) 623-8807

**ALBERTA** 7476 49th Avenue Red Deer. AB **T4P 1M2** PH: (403) 346-6476 FX: (403) 346-5152

EMAIL: WEBSITE:

# A) SHUT DOWN AND COVER **REMOVAL**

#### **SWING BOLT CLOSURE**

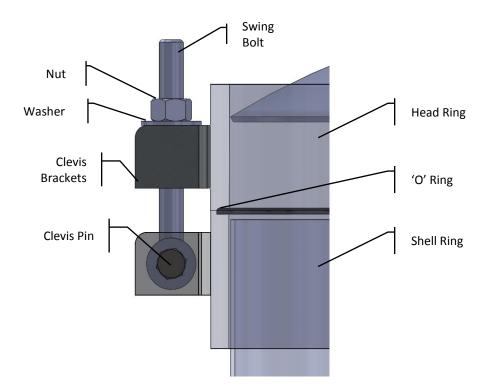

Operator Warning: Do not attempt to open the filter housing while the inlet/outlet valves are open, or while the filter housing contains pressure.

- Inlet and/or pressure inlet valve must always be closed first.
- 2. Shut off outlet and/or discharge side valve(s).
- 3. Any pressure, which may be in the filter housing after the inlet and outlet valves have been closed, should be vented before attempting to open the filter housing. Care should be taken to keep face and hands protected and clear of filter vessel while venting the filter housing.
- 4. Drain the filter housing by opening the side and bottom drain valves. The dirty drain is located on the side of the UFH Series filter housing and the clean drain is located on the bottom of the vessel.

CAUTION: Do not, at any time remove or loosen the swing bolts before draining. Failure to drain the vessel can result in pressurized fluid being trapped in the vessel. Fluid may spray out when the swing bolts are loosened causing personal injury or damage to equipment.


- 5. Open the air vent to relieve the housing pressure.
- 6. Loosen the cover nuts (eye or hex) in an alternate diagonal pattern.
- 7. A head lift with a hand wheel is standard on all vessels that are greater then 12" diameter or have a cover weighing more than 30lbs. Make sure to raise the cover high enough to clear the cartridge compression springs and guide pin.

# B) MEDIA REPLACEMENT COMPONENTS

#### **Ultra Flow Cartridge Filter**

Fil-Trek Corp. utilizes filter cartridges ranging in size from 20", 40" and 60" long. For maximum filtration efficiency, Fil-Trek recommends that cartridges should be replaced once a 15 PSI pressure drop is reached due to dirty cartridges. Failure to do so may result in damage to the filter cartridge and/or housing.

- 1. After the cover is removed, remove and discard the worn Fil-Trek cartridges.
- 2. Inspect the Support tube for any defects. It is only necessary to remove the Support tube's if they are damaged.
- 3. Clean and inspect filter housing interior and all components.
- 4. Slide new Fil-Trek cartridges onto the Support tube.
- 5. Press cartridge down and ensure o-rings are sealed inside the bottom coupling.

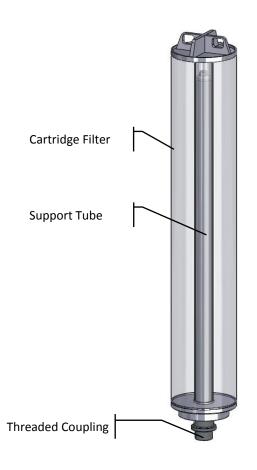

## **UFH SERIES**

Ultra Flow Filter Housing
ASME Code
Universal

#### **FIL-TREK CORPORATION**

# ONTARIO 70 Fleming Drive Cambridge ON


Cambridge, ON N1T 2B1 PH: (519) 623-7448

#### ALBERTA 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2

PH: (519) 623-7448 PH: (403) 346-6476 FX: (519) 623-8807 FX: (403) 346-5152

Ultra Flow Filter Housing
ASME Code
Universal

# C) COVER REPLACEMENT AND START-UP

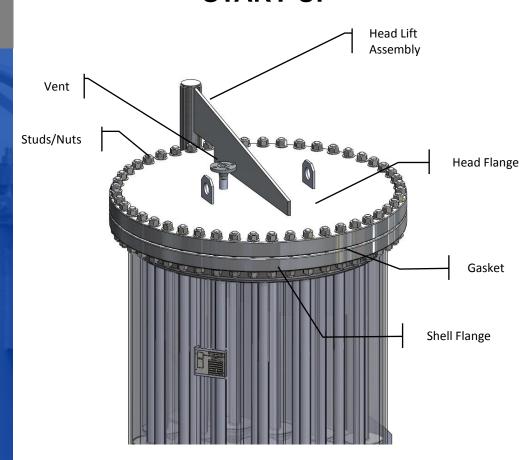

- 1. Clean and inspect the gasket seating surface. Re-lubricate the gasket heavily with petroleum jelly.
- 2. Swing bolts and nuts should be cleaned, inspected and lubricated.
- 3. Position the cover over the filter body and align the clevis bracket notches with the swing bolts. If your UFH Series vessel has a domed top head there will be a guide pin, which will assist with aligning the cover into place. After the cover is properly aligned, turning the hand wheel, in a counterclockwise motion, will lower the cover.
- 4. After the cover is lowered into place, position the swing bolts to the cover and install the nuts (hex or eye).
- 5. Tighten the nuts by following the torque procedure.
- 6. Close the drain valve and open the vent valve or plug.
- 7. Open the inlet valve and allow the vessel to fill slowly.
- 8. When air is expelled from the vessel and liquid begins to bleed from the vent, close the vent valve.
- 9. Open the outlet valve(s).

#### FIL-TREK CORPORATION

ONTARIO
70 Fleming Drive
Cambridge, ON
N1T 2B1
PH: (519) 623-7448

FX: (519) 623-8807


ALBERTA 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2 PH: (403) 346-6476 FX: (403) 346-5152

#### **TORQUE PROCEDURE**

#### The torque procedure is as follows:

- 1. Bolts must be all be snug tight before starting.
- 2. Apply the starting torque, shown below working in a star pattern.

BOLT SIZE	STARTING TORQUE	
1/2"	20 ft-lbs.	
5/8"	30 ft-lbs.	
3/4"	40 ft-lbs.	
1"	50 ft-lbs.	
1 1/8"	75 ft-lbs.	

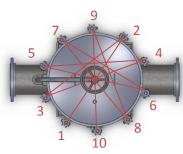

- 3. Apply an additional 20ft-lbs of torque working in the same star pattern
- 4. Bring the vessel up to working pressure.
- 5. If the vessel begins to leak from the seal, relieve the pressure by 25% from where the pressure vessel began to leak. After the pressure has been dropped add additional 15ft-lb increments in the same star pattern until the unit is sealed. Do not exceed the specified maximum value of torque shown below and do not over torque the vessel to the point of bending the vessel's washers.

BOLT SIZE	MAXIMUM TORQUE	
1/2"	100 ft-lbs.	
5/8"	150 ft-lbs.	
3/4"	200 ft-lbs.	
1"	250 ft-lbs.	
1 1/8"	300 ft-lbs.	

#### TROUBLESHOOTING

If cover is still leaking after following the above torque procedure:

- 1. Remove the cover and inspect the O-Ring.
- 2. Make sure O-Ring is clean, not twisted, pinched or damaged and well lubricated.
- 3. Make sure mating faces are clean and undamaged.
- 4. If problem persists, contact Fil-Trek.

# **UFH SERIES**

Ultra Flow Filter Housing
ASME Code
Universal

#### FIL-TREK CORPORATION

ONTARIO
70 Fleming Drive
Cambridge, ON

N1T 2B1 PH: (519) 623-7448 FX: (519) 623-8807 ALBERTA 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2 PH: (403) 346-6476 FX: (403) 346-5152

Ultra Flow Filter Housing
ASME Code
Universal

# D) WARRANTY

Seller warrants that the items sold hereunder shall be free from defects in material or workmanship for a period of 12 MONTHS AFTER STARTUP or 18 MONTHS AFTER THE DATE OF SHIPMENT from Fil-trek Corporation or one of its divisions, whichever comes first. This warranty comprises the sole and entire warranty pertaining to items provided hereunder. Seller makes no other warranty, guarantee, or representation of any kind whatsoever. All other warranties, including but not limited to, merchantability and fitness for purpose, whether express, implied, or arising by operation of law, trade usage, or course of dealing, are hereby disclaimed.

Notwithstanding the foregoing, there are no warranties whatsoever on items built or acquired wholly or partially, to buyer's designs or specifications.

Limitation of Remedy: Seller's liability arising from or in any way connected with the items sold or this contract shall be limited exclusively to repair or replacement of the items sole or refund of the purchase price by buyer, at seller's sole option. In no event shall seller be liable for any incidental, consequential, or special damages of any kind or nature whatsoever, including but not limited to lost profits arising from or in any way connected with this agreement or items sold hereunder, whether alleged to arise from breach of contract, express or implied warranty, or in tort, including without limitation, negligence, failure to warn or strict liability.

THE WARRANTY IS VOID IF ANY OF THE SPARE PARTS ARE NOT SUPPLIED BY FIL-TREK CORPORATION OR ONE OF ITS DIVISIONS.

#### FIL-TREK CORPORATION

ONTARIO
70 Fleming Drive
Cambridge, ON
N1T 2B1
PH: (519) 623-7448

FX: (519) 623-8807

ALBERTA 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2 PH: (403) 346-6476 FX: (403) 346-5152


EMAIL: <u>info@fil-trek.com</u> WEBSITE: <u>www.fil-trek.com</u>

# E) SPARE PARTS LIST

SERIAL NUMBER	
MODEL NUMBER	
QTY	
CUSTOMER	
YEAR BUILT	

PART NUMBER	DESCRIPTION	QTY REQUIRED PER UNIT	QTY TO ORDER

Note: UFH Series housings accept size 20", 40" and 60" Ultra Flow filters. Please visit our website for more information.

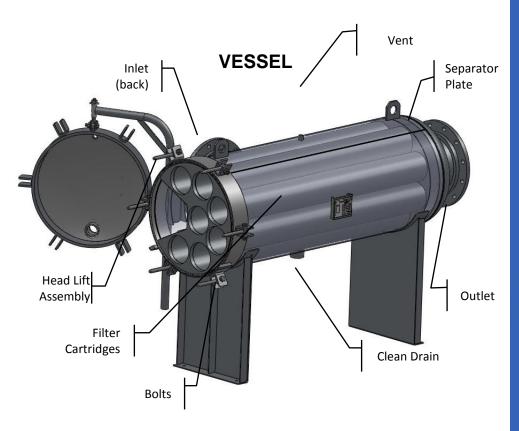

FOR SPARE PARTS INQUIRIES OR FOR A DETAILED DRAWING OF YOUR HOUSING, PLEASE CONTACT FIL-TREK DIRECTLY.

# **UFH SERIES**

Ultra Flow Filter Housing
ASME Code
Universal

#### FIL-TREK CORPORATION

ONTARIO
70 Fleming Drive
Cambridge, ON
N1T 2B1
PH: (519) 623-7448
FX: (519) 623-8807

ALBERTA 7476 49<sup>th</sup> Avenue Red Deer. AB T4P 1M2 PH: (403) 346-6476 FX: (403) 346-5152

EMAIL: <u>info@fil-trek.com</u> WEBSITE: <u>www.fil-trek.com</u>